TROY-BILT®

Parts Catalog

Hydrostatic Drive Garden Tractors

Models

13039 —16HP
Serial Numbers 130390100101—
130390199999

13040 — 18HP
S/N 1304010101 —
1304019999

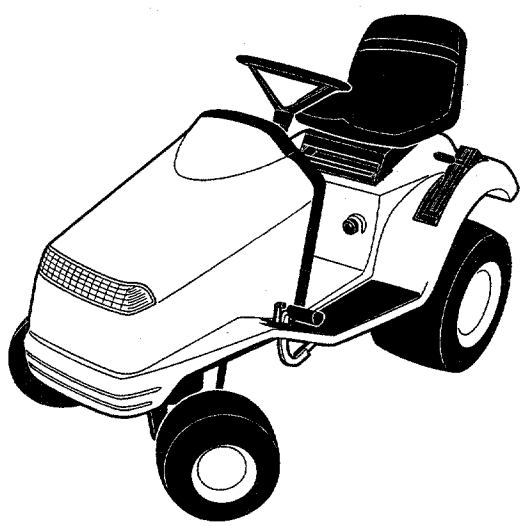

© 1994 Garden Way Inc.

Form 1768259 Rev. B (2/94)

TROY-BILT GARDEN TRACTOR

S/N 130390100101 - 130390199999
130400100101 - 130400199999

BODY & TRIM ASSEMBLY

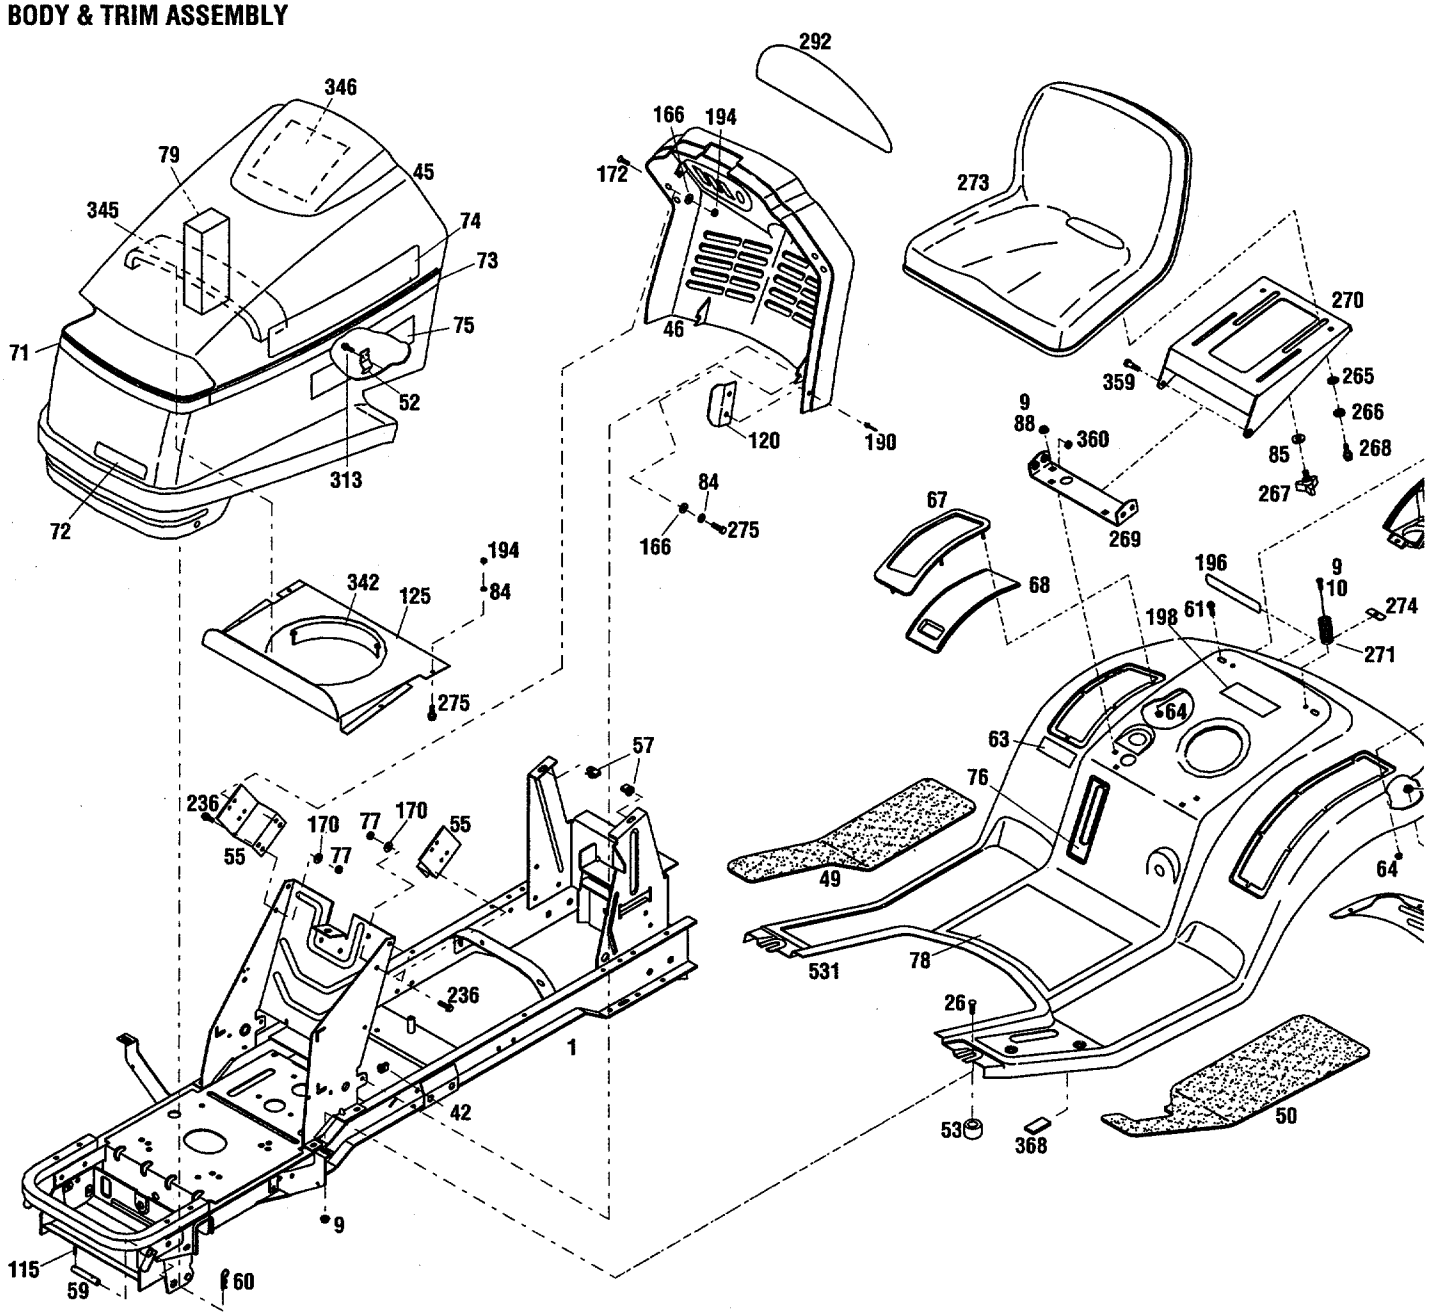

Ref #	Part #	Description	Qty.
1	1765440001	Frame Ass'y	1
9	1186391	Fl. Nut, 5/16-18	8
10	1100044	Hex Hd. Cap Screw, 5/16-18 x 1	2
26	1186100	Carriage Bolt, 5/16-18 x 5/8	4
42	1185893	Tinnerman U-Nut, 1/4-20	2
45	1765382	Hood	1
46	1765376	Console	1
48	1765331010	Rear Fender Trim	1
49	1765370	R.H. Foot Pad	1
50	1765371	L.H. Foot Pad	1
52	1765384	Latch	2

Ref #	Part #	Description	Qty.
53	1730681	Spacer	2
55	1768775001	Mounting Bracket Ass'y	2
56	1186389	Fl. Nut, 1/4-20	6
57	1761680	Self Retaining Nut, 5/16-18	2
59	1765497	Hood Pivot Pin	1
60	1723478	Cotter Spring, 1/8	3
61	1186330	Screw, 5/16-18 x 7/8	1
62	1766139	Lift Handle Cover	1
63	1901900	Decal, American Legend	1
64	1767998	Self-Threading Nut, 1/4	12
65	1186309	Fl. Screw, 1/4-20 x 1/2	6

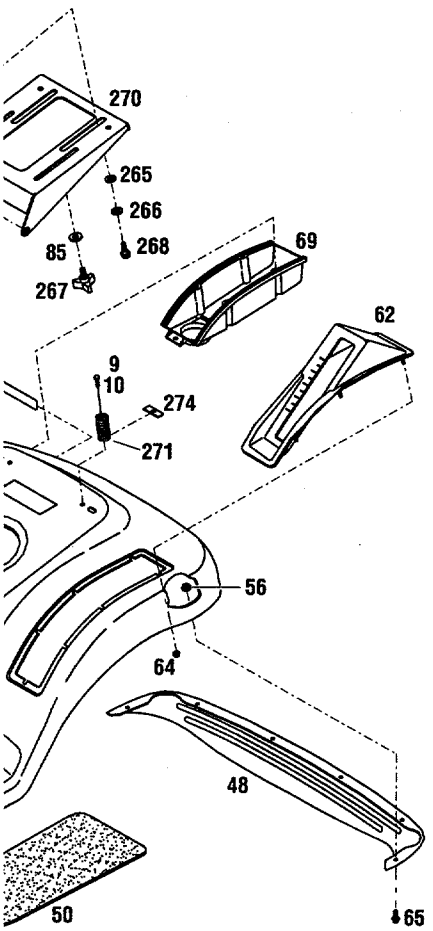

Ref #	Part #	Description	Qty.
67	1765493	Storage Top	1
68	1765492	Container Cover	1
69	1765494	Storage Container	1
71	1766383	Decal, Front Stripe	1
72	1759101	Decal, Logo	1
73	1766382	Decal, Side Stripe	2
74	1767886	Decal, Logo	2
75	1766388	Decal, Model (13039)	2
	1766389	Decal, Model (13040)	2
76	1766140	Decal, Fuel Level	1
77	1186230	Hex Nut, 5/16-18	4

Ref #	Part #	Description	Qty.
78	1766142	Decal, Tunnel	1
79	1768829	Sealing Block	2
84	1100241	Lock Washer, 1/4 SAE	2
85	1107383	Flat Washer, 3/8	2
88	1186097	Carriage Bolt, 5/16-18 x 5/8	2
115	1120210	Drive Pin, 3/16 x 1	2
120	1768828001	Hood Align Bracket	2
125	1767873001	Upper Heat Shield	1
166	1720883	Washer, 1/4 I.D. x 1-1/4 O.D	2
170	1100242	Lock Washer, 5/16	4
172	1816081	Soc. Hd. Screw, 1/4-20 x 5/8	2
190	1739918	Pop Rivet, 3/16	4
194	1186229	Hex Nut, 1/4-20	2
196	1759102	Decal, Logo	1
198	1767876	Decal, Fuel	1
236	1186329	Fl. Screw, 5/16-18 x 3/4	4
265	1705793	Nylon Washer	2
266	1706782	Bowed Washer	2
267	1734269	Adjusting Knob	2
268	1754125	Shoulder Bolt	2
269	1766075001	Seat Bracket	1
270	1766074001	Seat Support	1
271	1766077	Compression Spring	2
273	1766161	Seat	1
274	1766347	Spring Hold Down Brkt.	2
275	1111599	Screw, 1/4-20 x 5/8	6
292	1764887	Lens (Warning Lights)	1
313	1185712	Self-Threading Screw	4
342	1767897	Heat Shield Gasket	1
345	1767898	Sealing Strip	1
346	1765397	Decal, Service	1
359	1100913	Hex Hd. Cap Screw, 3/8-16 x 7/8	2
360	1110108	Lock Nut, 3/8-16	2
368	1767995	Pad	1
531	1768716	Rear Fender (Incl. Refs. 78 & 198)	1

TROY-BILT GARDEN TRACTOR

S/N 130390100101 - 130390199999
130400100101 - 130400199999

FRAME ASSEMBLY

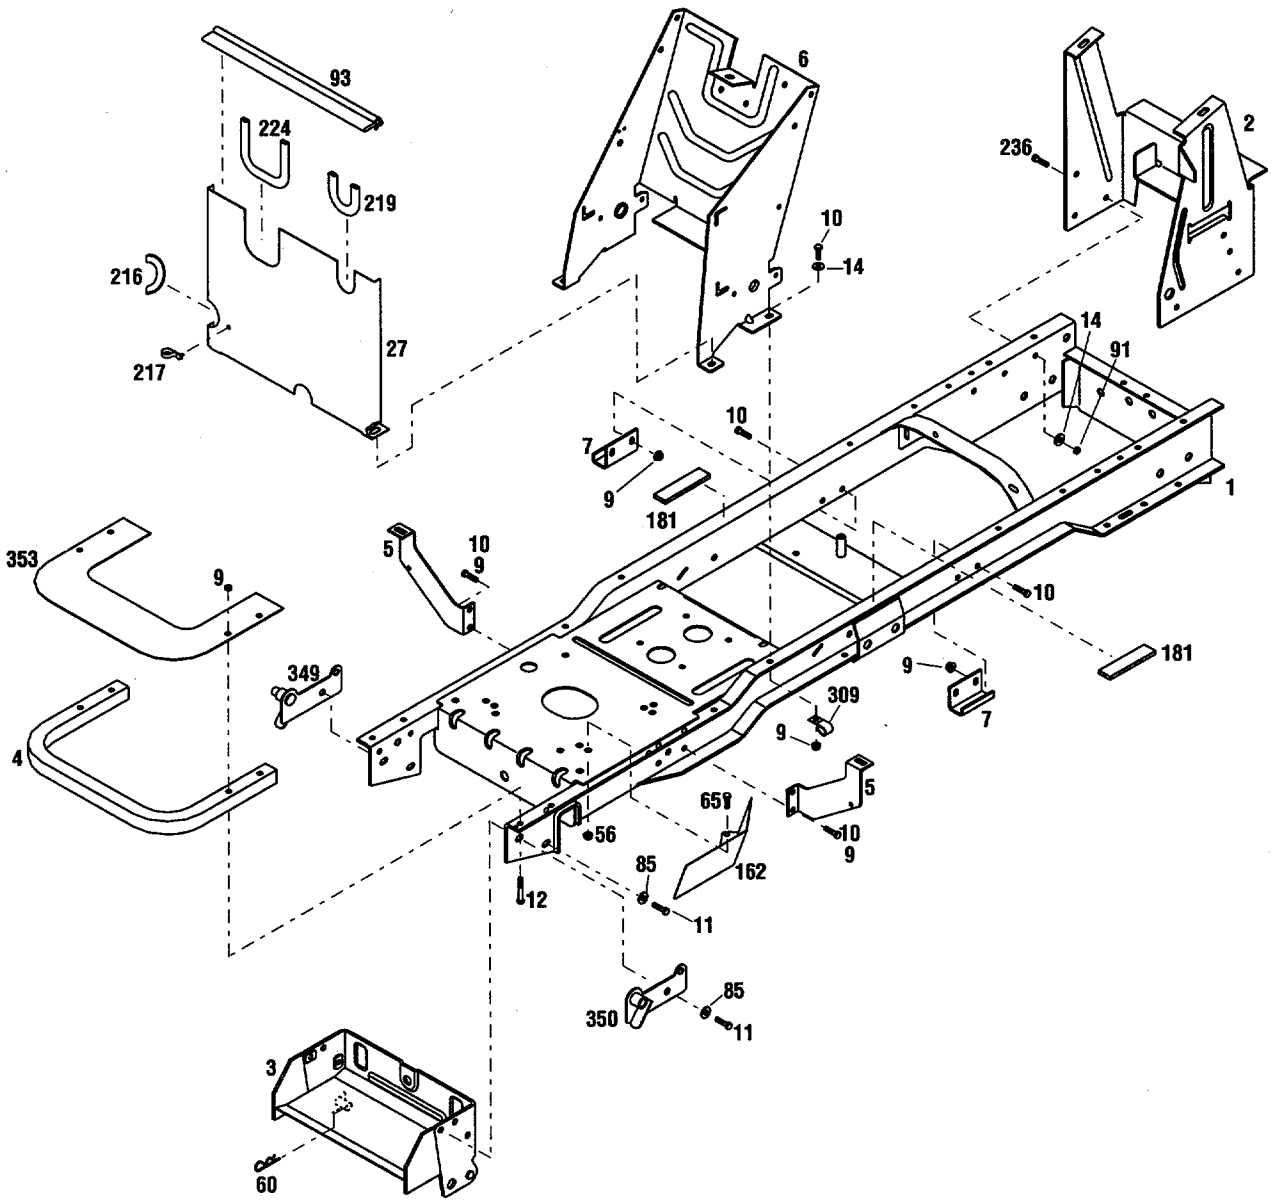

Ref #	Part #	Description	Qty.
1	1765440001	Frame Ass'y	1
2	1766050001	Rear Tank Support	1
3	1766082001	Attachment Bracket Ass'y	1
4	1766336001	Bumper	1
5	1765431001	Fender Support	2
6	1765446001	Console Support	1
7	1766086001	Mower Stop	2
9	1186391	Fl. Nut, 5/16-18	10
10	1100044	Hex Hd. Cap Screw, 5/16-18 x 3/4	10
11	1100046	Hex Hd. Cap Screw, 3/8-16 x 1	6
12	1100799	Hex Hd. Cap Screw, 5/16-18 x 1-3/4	4
14	1107382	Flat Washer, 5/16	8
27	1768826001	Heat Shield	1
56	1186389	Fl. Nut, 1/4-20	1
60	1723478	Cotter Spring, 1/8	2
65	1186309	Fl. Screw, 1/4-20 x 1/2	1
85	1107383	Flat Washer, 3/8	6
91	1732499	Lock Nut, 5/16-18	4
93	1768834	Heat Shield Gasket	1
162	1767874001	Upper Heat Shield	1
181	1767883	Pad	2
216	1768835	Trim	1
217	1745366	Cable Hanger	1
219	1752694	Trim	1
224	1768840	Trim	1
236	1186329	Fl. Screw, 5/16-18 x 3/4	4
309	1747738	J-Clamp	1
349	1767867	R.H. Pivot Plate	1
350	1767868	L.H. Pivot Plate	1
353	1767963001	Heat Shield	1

TROY-BILT GARDEN TRACTOR

S/N 130390100101 - 130390199999
130400100101 - 130400199999

STEERING ASSEMBLY

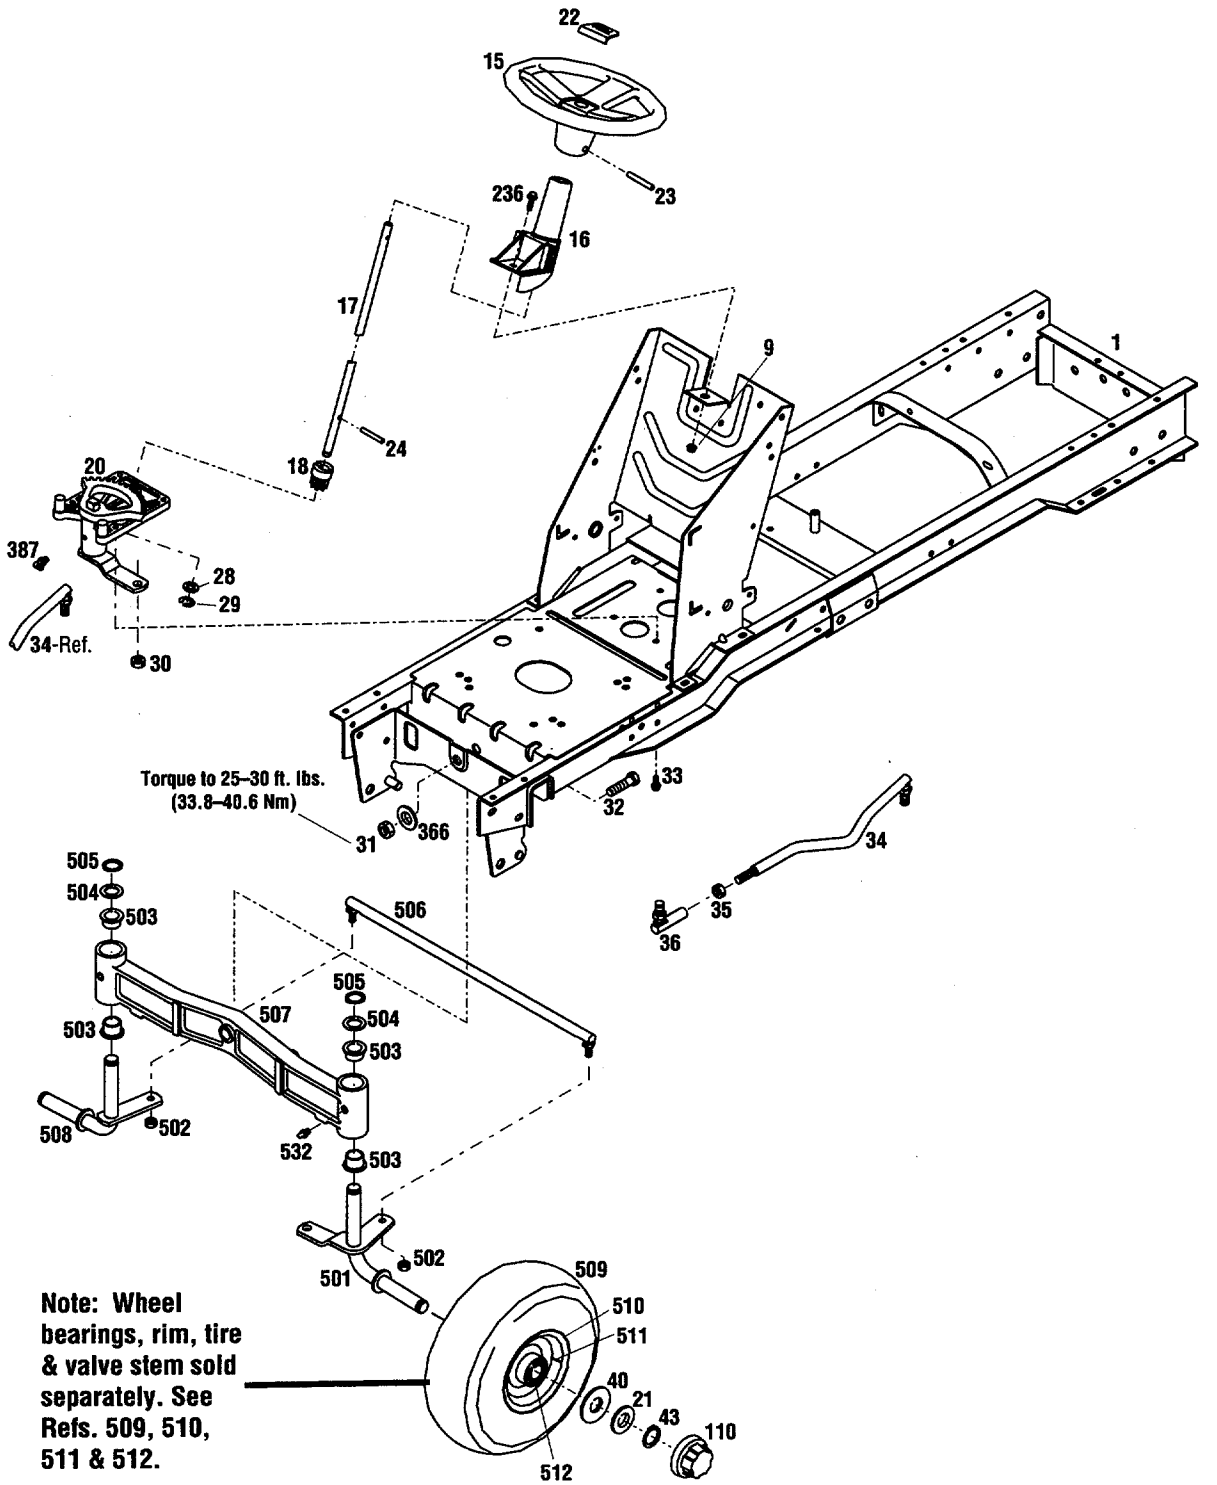

Ref #	Part #	Description	Qty.
1	1765440001	Frame Ass'y	1
9	1186391	Fl. Nut, 5/16-18	39
15	1766027	Steering Wheel	1
16	1765443	Cannon Steer Support	1
17	1765010	Steering Shaft	1
18	1765243	Pinion Gear	1
20	1768771	Steering Gear Ass'y	1
21	1703073	Fl. Washer, 1 x 1-1/2	2
22	1766221	Steering Cap	1
23	1185284	Roll Pin, 1/4 x 2-1/4	1
24	1185348	Drive Pin, 1/4	1
28	1705092	Special Washer, 5/8 x 1	1
29	1177567	Retaining Ring, 5/8	1
30	1768796	Locking Jam Nut, 1/2-20	2
31	1758231	Top Lock Nut, 5/8-11	1
32	1767953	Hex Hd. Cap Screw	1
33	1766984	Fl. Lock Screw, 5/16-18 x 3/4	4
34	1765315	Drag Link	1
35	1186247	Hex Jam Nut, 1/2-20	1
36	1716180	Ball Joint	1

Ref #	Part #	Description	Qty.
40	1766242	Special Washer, 3/4 x 2-1/2	4
43	1185689	Retaining Ring	4
110	1766215	Hub Cap	4
236	1186329	Fl. Screw, 5/16-18 x 3/4	9
366	1100266	Flat Washer	1
387	1731504	90° Grease Fitting	1
501	1765316001	L.H. Spindle Ass'y	1
502	1110150	Selflock Nut, 3/8-24	2
503	1752556	Flange Bearing	4
504	1703073	Thrust Washer, 1	2
505	1185689	Retaining Ring, Ext.	2
506	1765009001	Tie Rod	1
507	1765322001	Front Axle Casting	1
508	1765317001	R.H. Spindle Ass'y	1
509	1768792	Tire, 16 x 6.50-8, Mulit Trac CS	2
510	1766073	Rim Ass'y	2
511	1718086	Valve Stem	2
512	1756524	Wheel Bearings	4
532	1185976	Grease Fitting	2

TROY-BILT GARDEN TRACTOR

S/N 130390100101 - 130390199999
130400100101 - 130400199999

16 & 18 HP ENGINE ASSEMBLY

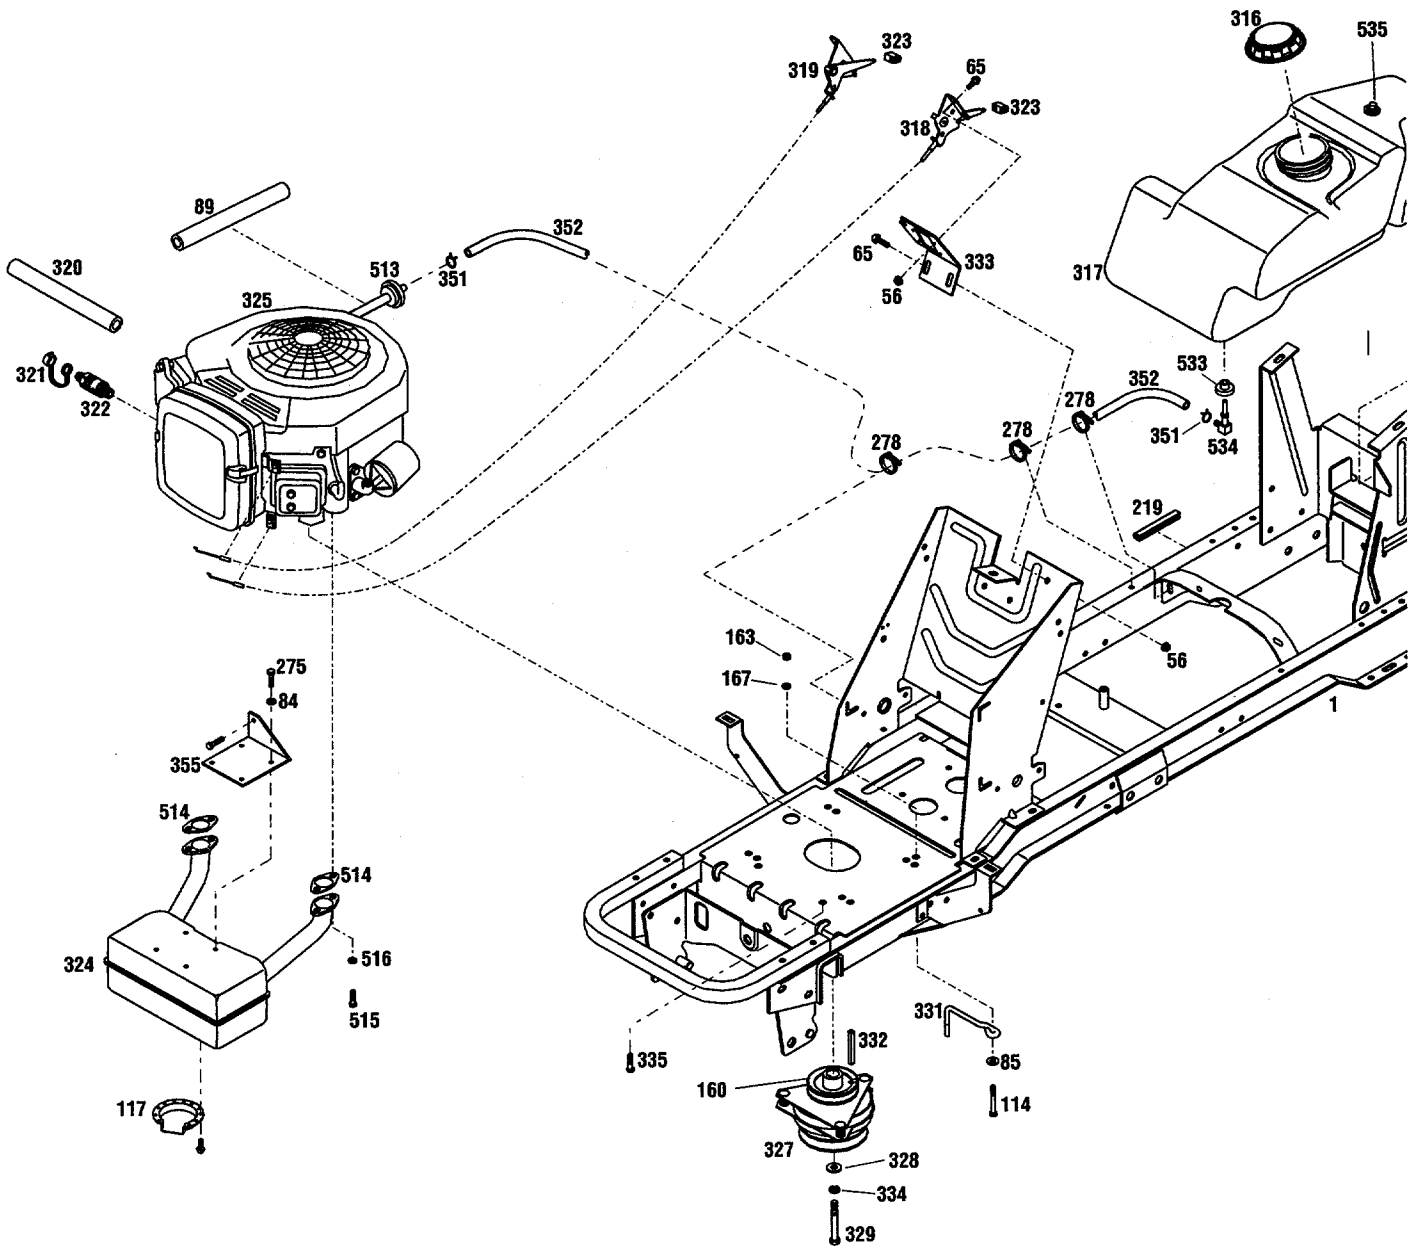

Ref #	Part #	Description	Qty.
1	1765440001	Frame Ass'y	1
56	1186389	Fl. Nut, 1/4-20	2
65	1186309	Fl. Screw, 1/4-20 x 1/2	4
84	1100241	Lockwasher, 1/4	4
85	1107383	Flat Washer, 3/8	1
89	1768830	Fuel line Insulation	1
114	1768194	Thd. Form. Screw, 3/8 x 1-1/2	2
117	1758940	Muffler Deflector	1
160	1766201	Engine Sheave	1
163	1186231	Hex Nut, 3/8-16	5
167	1100243	Lock Washer, 3/8	3

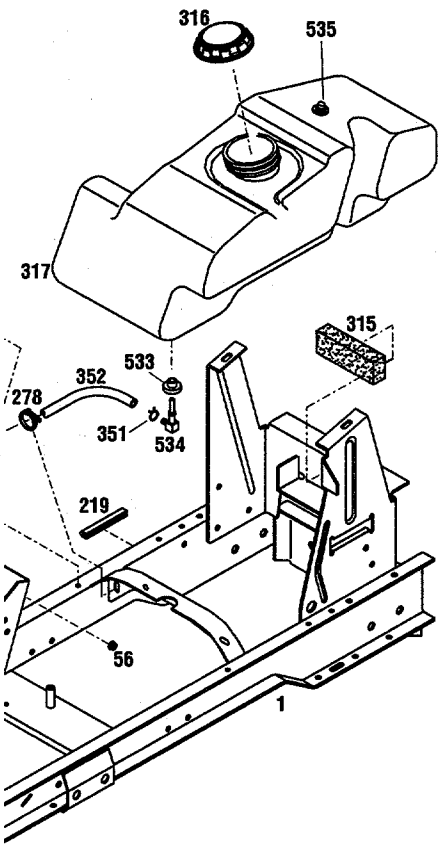

Ref #	Part #	Description	Qty.
219	1752694	Trim	1
275	1111599	Screw, 1/4-20 x 5/8	4
278	1735531	Cable Tie	5
315	1766341	Fuel Tank Pad	1
316	1766188	Fuel Cap	1
317	1765404	Fuel Tank (Incl. Refs. 533, 534 & 535)	1
318	1758800	Throttle Control	1
319	1755926	Choke Control	1
320	1766327	Hose	1
321	1766326	Oil Drain Cap	1
322	1766325	Oil Valve Ass'y	1

Ref #	Part #	Description	Qty.
323	1766121	Control Knob	2
324	1766299	Muffler	1
325	*	Engine 16 HP (Model 13039)	1
	*	Engine 18 HP (Model 13040)	1
327	1755341	Electric Clutch	1
328	1744455	Special Washer	1
329	1767165	Hex Hd. Cap Screw, 7/16-20 x 3-1/4	1
331	1754787	Clutch Retainer	1
332	1748146	Sq. Key, 1/4 x 2-1/2	1
333	1766119001	Control Mounting Bracket	1
334	1100244	Spring Lock Washer, 7/16	1
335	1762042	Hex Hd. Screw, 3/8-16 x 1	2
351	1750687	Hose Clamp	2
352	1767879	Fuel Line	1
355	1767903001	Muffler Bracket	1
513	1727491	Fuel Filter	1
514	*	Muffler Gasket	2
515	1100069	Hex Hd. Screw, 1/4-20 x 1	4
516	1100241	Lock Washer, 1/4	4
533	1738433	Bushing	1
534	1751477	Fuel Tank Elbow	1
535	1768804	Fuel Tank Vent	1

* Purchase engine parts form your Briggs & Stratton dealer. Refer to engine for type and code.

TROY-BILT GARDEN TRACTOR

S/N 130390100101 - 130390199999
130400100101 - 130400199999

EATON 851 HYDRO TRANSMISSION ASSEMBLY

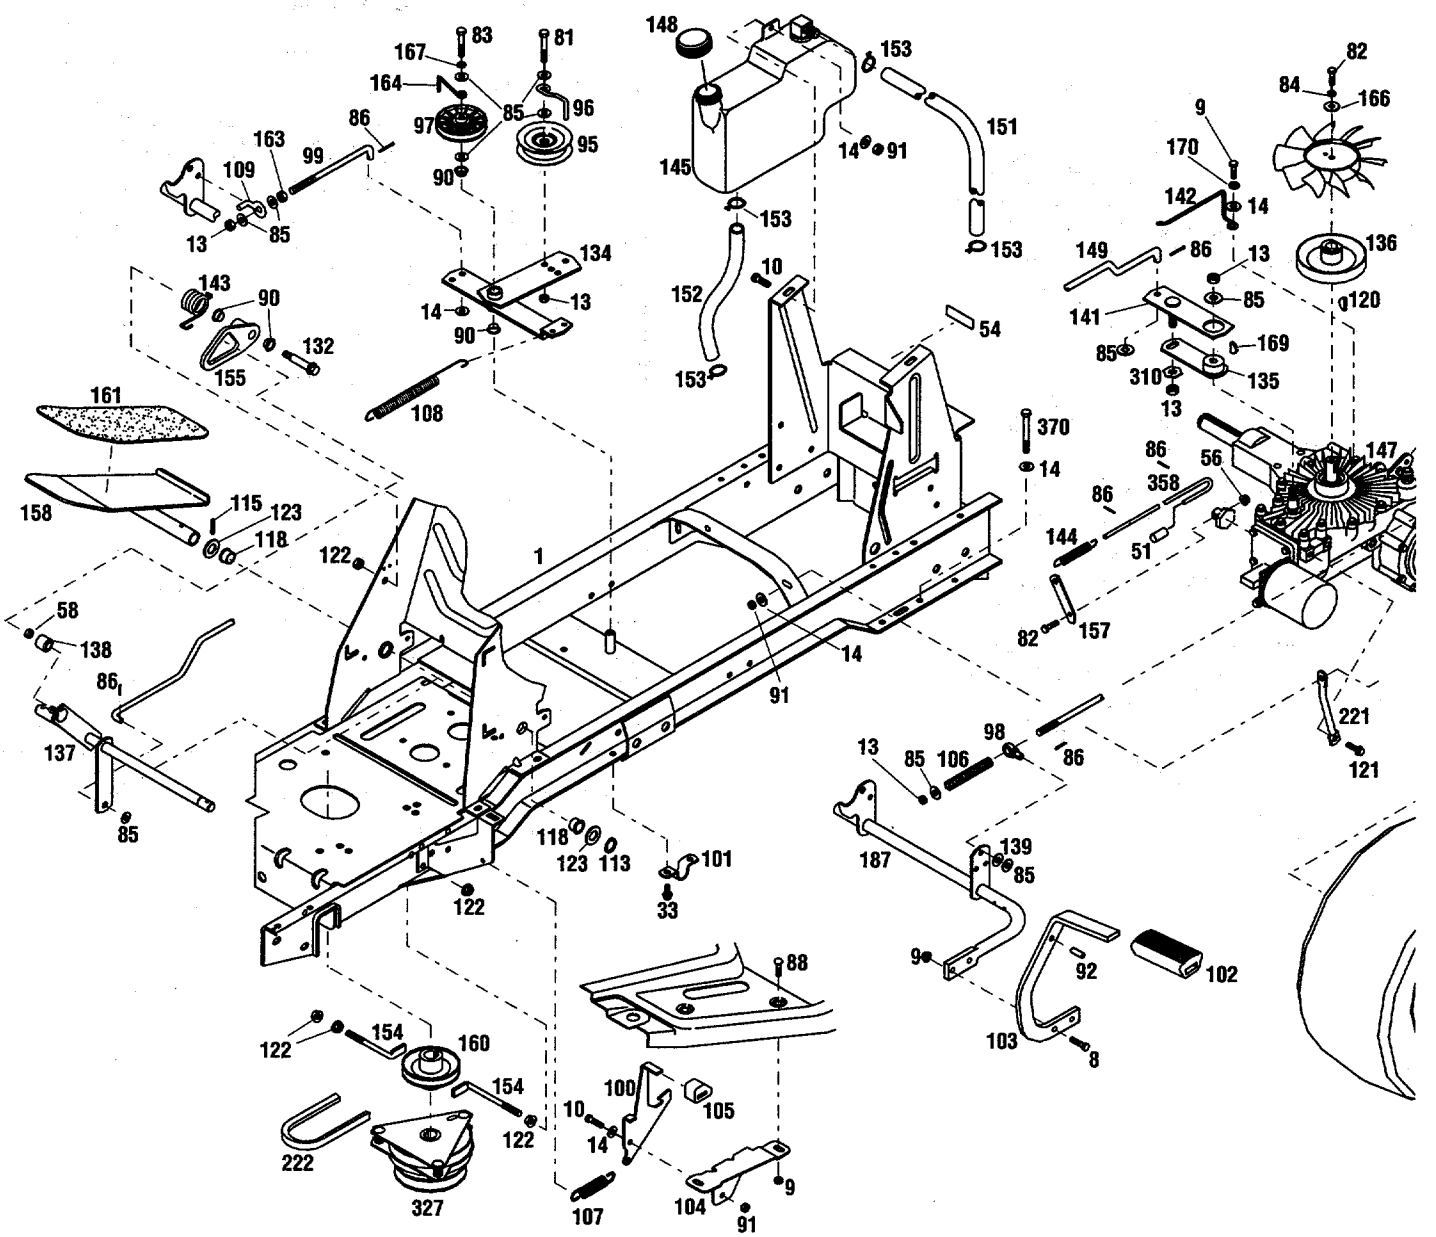

Ref #	Part #	Description	Qty.
1	1765440001	Frame Ass'y	1
8	1100045	Hex Hd. Cap Screw, 5/16-18 x 1	2
9	1186391	Fl. Nut, 5/16-18	4
10	1100044	Hex Hd. Cap Screw, 5/16-18 x 3/4	5
13	1733398	Hex Toplock Nut, 3/8-16	5
14	1107382	Flat Washer, 5/16	10
33	1766984	Fl. Lock Screw, 5/16-18 x 3/4	1
40	1766242	Special Washer, 3/4 x 2-1/2	2
43	1185689	Retaining Ring	2
44	1765307	Extension Spring	1
51	1767984	Handle Grip	1
54	1767967	Decal, Transmission Release	1

Ref #	Part #	Description	Qty.
56	1186389	Fl. Nut, 1/4-20	1
58	1734398	Top Lock Nut, 1/4-20	5
81	1100048	Hex Cap Screw, 3/8-16 x 2	1
82	1100069	Hex Cap Screw, 1/4-20 x 1	4
83	1100086	Hex Cap Screw, 3/8-16 x 1-3/4	1
84	1100241	Lock Washer, 1/4 SAE	1
85	1107383	Flat Washer, 3/8	6
86	1100346	Cotter Pin, 3/32 x 3/4	6
88	1186097	Carriage Bolt, 5/16-18 x 5/8	1
90	1715538	Nyliner Bushing	1
91	1732499	Lock Nut, 5/16-18	7
92	1733103	Drive Pin, 5/16 x 3/4	1

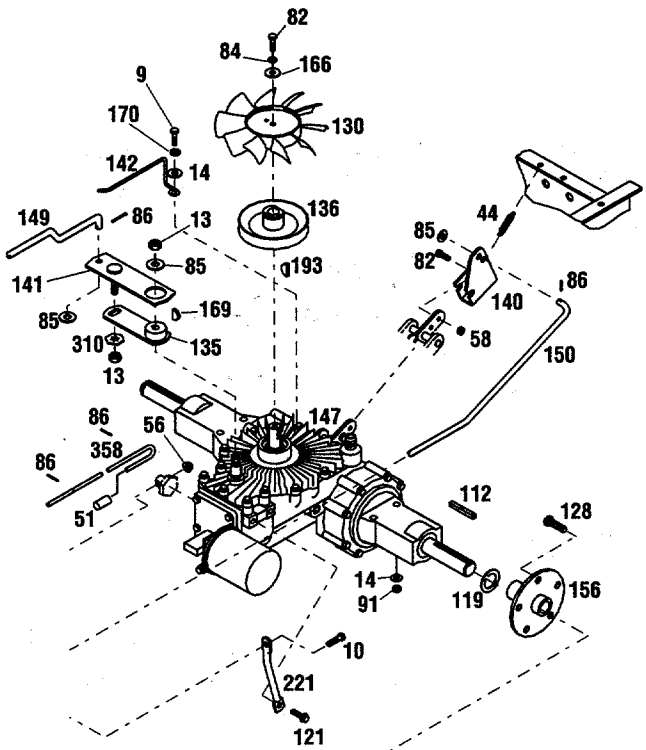

Note: Rim, tire & valve stem sold separately. See Refs. 518, 519 & 520

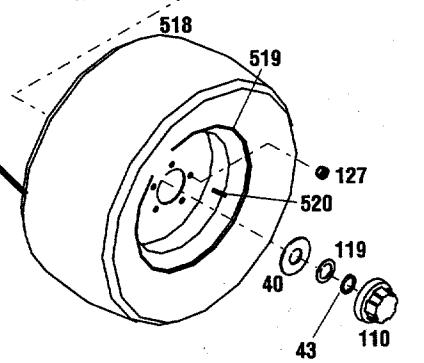

Ref #	Part #	Description	Qty.
95	1756151	Idler Pulley	1
96	1760096	Belt Guide	1
97	1760097	Idler Pulley	1
98	1751848	Swivel	1
99	1765044	Clutch Rod	1
100	1765096	Brake Lock Latch	1
101	1765156	Clip, 3/4	1
102	1765167	Foot Pedal Pad	1
103	1765252	Brake Pedal	1
104	1765257	Brake Lock Bracket	1
105	1765297	Brake Pad	1
106	1765305	Compression Spring	1
107	1985140	Extension Spring	1
108	1765402	Extension Spring	1
109	1765461	Pivot Rod	1
110	1766215	Hub Cap	2
112	1104338	Square Key, 1/4 x 2	2
113	1118808	Retaining Ring	1

Ref #	Part #	Description	Qty.
115	1120210	Drive Pin, 3/16 x 1	1
118	1185802	Fl. Bearing	2
119	1185816	Washer, 1-1/64 ID	6
121	1186327	Whiz lock Screw, 5/16-18 x 1/2	1
122	1186393	Fl. Nut, 3/8-16	5
123	1715301	Thrust Washer, 5/8 x 1/1/8	2
127	1753025	Lug Nut, 7/16-20	10
128	1753026	Wheel Stud	10
130	1760370	Fan	1
132	1763219	Shoulder Screw	1
134	1765064	Idler Arm Ass'y	1
135	1765067	Hydro Arm Ass'y	1
136	1765072	Eaton Hydro Sheave	1
137	1765079	Hydro Pivot Shaft Ass'y	1
138	1767807	Ball Bearing	1
139	1760323	Flat Washer, 3/8	2
140	1765253	Hydro Brake Bracket	1
141	1765289	Hydro Control Arm Ass'y	1
142	1765304	Belt Guide	1
143	1765306	Torsion Spring	1
144	1720928	Extension Spring	1
145	1765348	Oil Reservoir	1
147	*	Transmission, Eaton 851 (See breakdown, pg. 16)	1
148	1765352	Tank Cap	1
149	1765353	Hydro Control Rod	1
150	1765354	Brake Rod	2
151	1765476	Hose, 5/8	1
152	1765477	Hose, 5/8	1
153	1765478	Hose Clamp, 5/8	4
154	1765482	Clutch Retainer	2
155	1766015	Neutral Return, Hydro	1
156	1766019	Wheel Hub	2
157	1767909	Dump Valve	1
158	1766085001	Hydro Pedal Ass'y	1
160	1766201	Engine Sheave	1
161	1766202	Foot Pedal Pad	1
163	1186231	Hex Nut, 3/8-16	1
164	1767900	Belt Guide	1
166	1720883	Washer, 1/4 I.D. x 1.25 O.D.	1
167	1100243	Lock Washer, 3/8	1
169	1100905	Woodruff Key, 1/8 x 1/2	1
170	1100242	Lockwasher, 5/16	1
187	1765061	Brake Pedal Ass'y	1
193	1185885	Woodruff Key, 3/16x 5/8	1
221	1765165	Transmission Support	1
222	1765349	V-Belt	1
310	1185715	Lock Washer, 3/8	1
327	1755341	Electric Clutch	1
358	1767907	Dump Valve Rod	1
370	1111610	Cap Screw, 5/16-18 x 3	1
518	1768795	Tire, 23 x 10.5-12, Multi Trac CS	2
519	1766131	Rim	2
520	1718086	Valve Stem	2

TROY-BILT GARDEN TRACTOR

S/N 130390100101 - 130390199999
130400100101 - 130400199999

LIFT ASSEMBLY

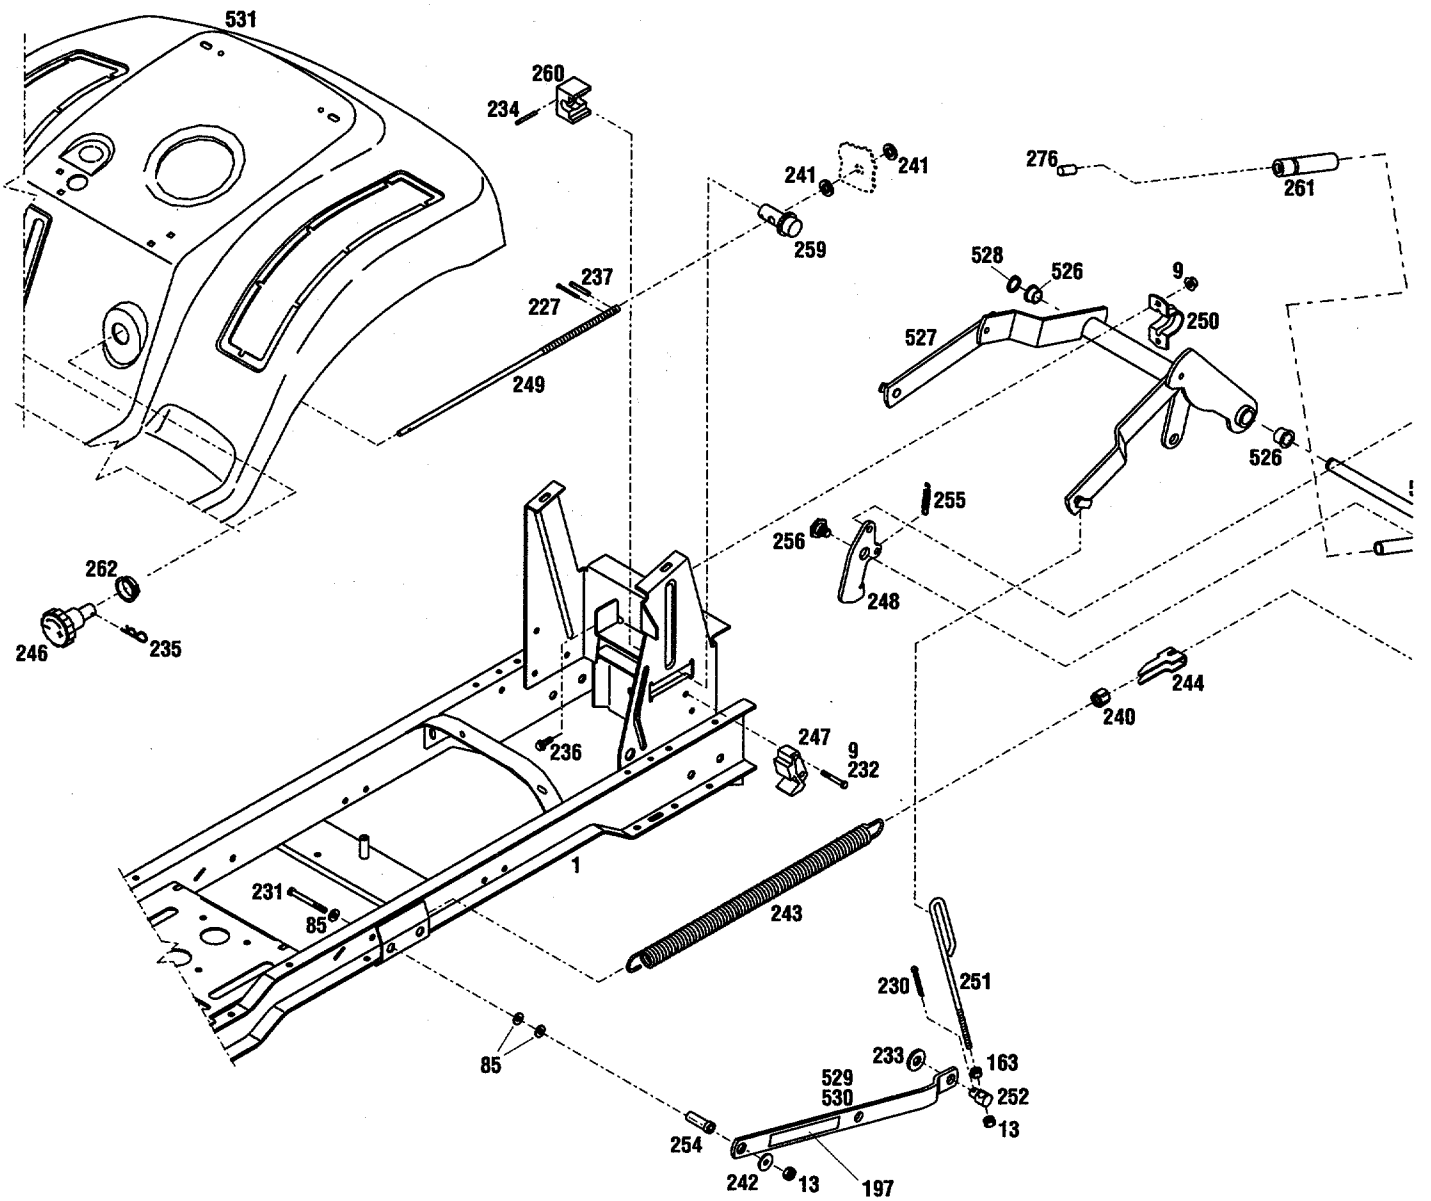

Ref #	Part #	Description	Qty.
1	1765440001	Frame Ass'y	1
9	1186391	Fl. Nut, 5/16-18	3
13	1733398	Hex Toplock, 3/8-16	2
85	1107383	Flat Washer, 3/8	6
163	1186231	Hex Nut, 3/8-16	2
197	1767877	Decal Warning	2
227	1100349	Cotter Pin, 1/8 x 3/4	1
230	1100351	Cotter Pin, 1/8 x 1-1/4	2
231	1111614	Hex Hd. Cap Screw, 3/8-16 x 3	2
232	1100799	Hex Cap Screw, 5/16-18 x 1-1/2	
233	1107386	Flat Washer, 5/8	2

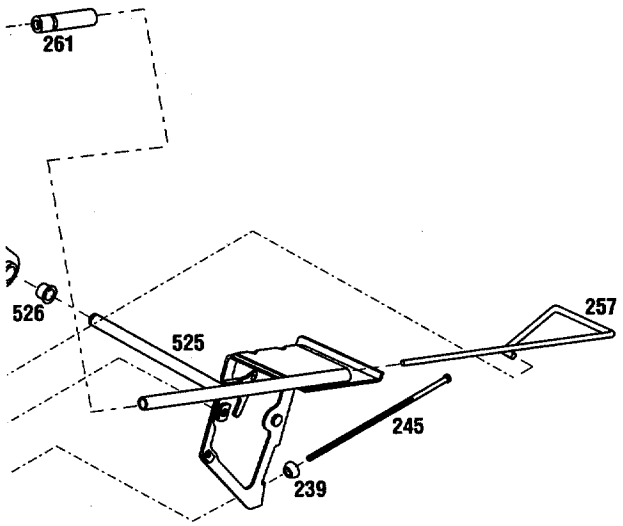

Ref #	Part #	Description	Qty.
234	1185376	Drive Pin	1
235	1817091	Hitch Pin	1
236	1186329	Fl. Screw, 5/16-18 x 3/4	2
237	1187961	Drive Pin, 5/32 x 1	1
239	1714521	Spherical Bearing	1
240	1717942	Special Nut, 5/16-18	1
241	1738490	Flat Washer, 1/2 x 1	2
242	1763355	Flat Washer, 3/8 x 1-1/2	2
243	1765445	Lift Assist Spring	1
244	1765457	Lift Assist Bracket	1
245	1765458	Lift Assist Screw	1

Ref #	Part #	Description	Qty.
246	1765485	Height Adjust Knob	1
247	1766028	Detent Block	1
248	1766029001	Latch	1
249	1766048	Height Adjust Screw	1
250	1766057	Lift Clamp	2
251	1767885	Lift Rod	2
252	1766059	Rear Lift Swivel	2
254	1766080	Spacer	2
255	1766174	Extension Spring	1
256	1766175	Shoulder Screw	1
257	1766178	Rod	1
259	1766257	Height Adjust Block	1
260	1766259	Height Adjust Collar	1
261	1766340	Lift Grip	1
262	1766346	Snap Bushing Grommet	1
276	1767880	Lift Button	1
525	1766032001	Lift Handle Ass'y	1
526	1764140	Bushing	2
527	1766068001	Lift Ass'y	1
528	1185649	Retaining Ring	1
529	1768718	Right Lift Link Ass'y (Incl. Ref. 197)	1
530	1768717	Left Lift Link Ass'y (Incl. Ref. 197)	1
531	1768716	Rear Fender	1

TROY-BILT GARDEN TRACTOR

S/N 130390100101 - 130390199999
130400100101 - 130400199999

ELECTRICAL ASSEMBLY

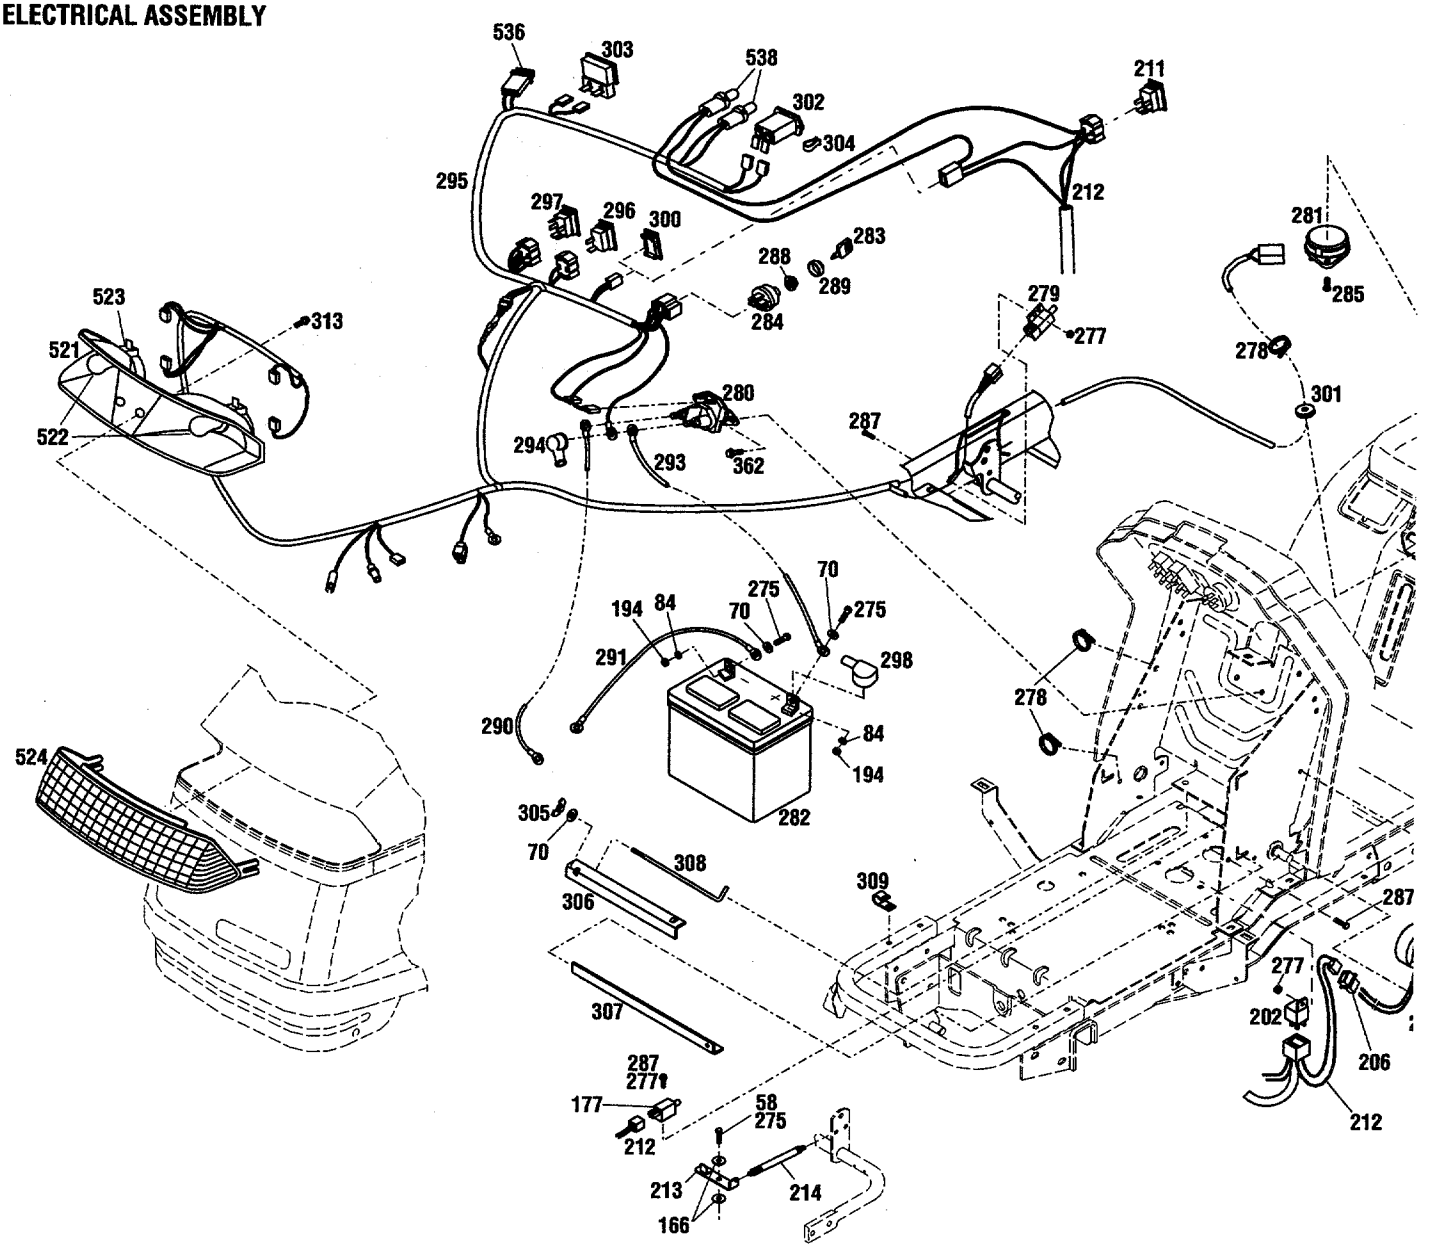

Ref #	Part #	Description	Qty.
33	1766984	Fl. Lock Screw, 5/16-18 x 3/4 (Model 13040)	2
58	1734398	Top Lock Nut, 1/4-20 (Model 13040)	1
70	1107381	Flat Washer, 1/4	3
84	1100241	Lock Washer, 1/4 SAE	2
115	1120210	Drive Pin, 3/16 x 1 (Model 13040)	1
133	1186396	Fl. Nut, 7/16-20 (Model 13040)	1
166	1720883	Washer, 1/4 I.D. x 1-1/4 O.D (Model 13040)	1
177	1748723	Push Button Switch, Brake (Model 13040)	1

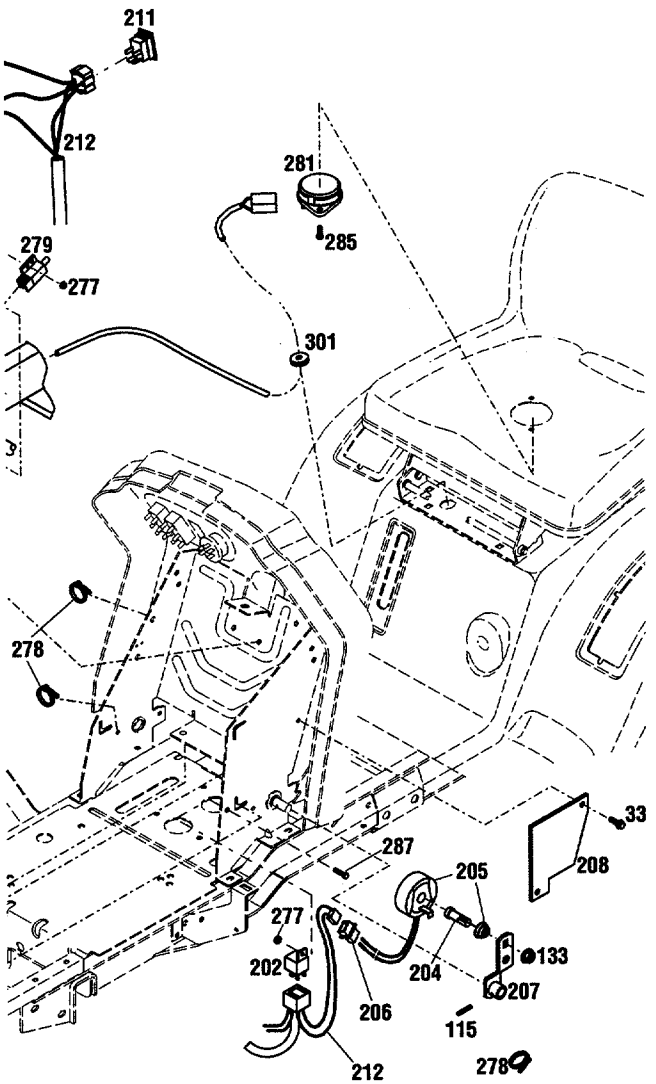

Ref #	Part #	Description	Qty.
194	1186229	Hex Nut, 1/4-20	2
202	1749907	Relay (Model 13040)	1
204	1750736	Special Screw (Model 13040)	1
205	1754675	Magnet (Model 13040)	1
206	1767852	Housing Pin Terminal (Model 13040)	1
207	1766290	Cruise Arm Ass'y (Model 13040)	1
208	1766334	Cruise Plate (Model 13040)	1
211	1766350	Cruise Switch (Model 13040)	1
212	1766351	Cruise Harness (Model 13040)	1
213	1767803	Cruise Arm Ass'y (Model 13040)	1
214	1767822	Spring (Model 13040)	1

Ref #	Part #	Description	Qty.
275	1111599	Screw, 1/4-20 x 5/8 (Model 13040)	2
277	1185985	Keps Nut, #10-24	3
278	1735531	Cable Tie	4
279	1751328	Push-Button Switch, Cruise (Model 13040)	1
280	1752137	Solenoid	1
281	1752506	Seat Switch	1
282	1752840	Battery	1
283	1753986	Key	1
284	1754250	Ignition Switch	1
285	1755349	Pan Hd. Screw, 1/4-20 x 1/2	1
287	1758070	Sems Screw, #10-24 x 5/8	4
288	1758146	Ignition Nut	1
289	1758147	Cap	1
290	1764885	Starter Cable	1
291	1764886	Neg. Battery Cable	1
293	1764888	Battery Cable	1
294	1764890	Solenoid Boot	1
295	1764893	Main Harness	1
296	1764894	Light Switch	1
297	1764895	PTO Switch	1
298	1764899	Terminal Boot	1
300	1766184	Switch Cover (Model 13039)	1
301	1766264	Grommet	1
302	1764883	Hour Meter (Model 13040)	1
303	1764884	Ammeter (Model 13040)	1
304	1766185	Tinnerman Clip (Model 13040)	2
305	1709652	Lock Wing Nut, 1/4-20	2
306	1765258001	Battery Clamp	1
307	1765444001	Lower Battery Angle	1
308	1766163	Hook Bolt	1
309	1747738	J-Clamp	1
313	1185712	Self-Threading Screw	1
362	1724492	Self Tapping Screw, 1/4-20 x 1/2	1
521	1768803	Headlight Reflector	1
522	1752872	Light Bulb	2
523	1752875	Socket	2
524	1765400	Lense	1
536	1768956	Fuse	1
538	17648597	Bulb	2

TROY-BILT GARDEN TRACTOR

S/N 130390100101 - 130390199999
130400100101 - 130400199999

EATON 851-111 HYDRO TRANSMISSION BREAKDOWN--(Complete Assembly: 1765350)

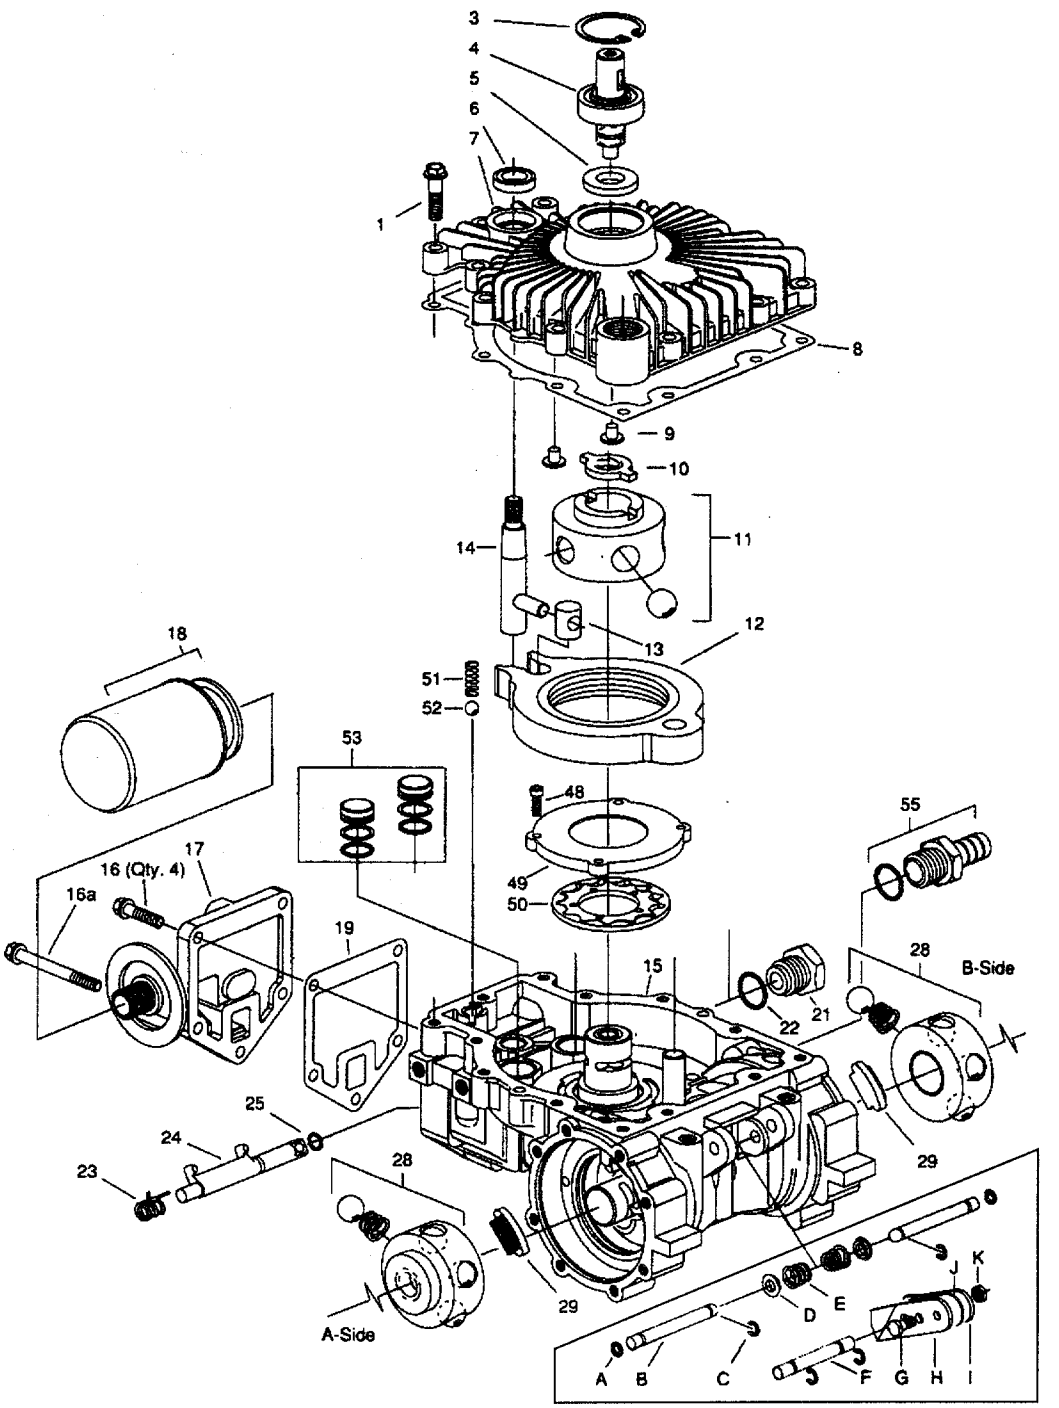

Ref #	Part #	Description	Qty.
1	1769200	Self Tapping Screw, 1/4-20	13
3	1769201	Ring, Retaining, Int.	1
4	1760892	Shaft, Input (S/A	1
5	1760893	Seal input Shaft	1
6	1757374	Seal, Control Shaft	1
7	1769202	Cover	1
8	1769203	Gasket, Cover	1
9	1769204	Button	2
10	1769205	Drive	1
11	1769206	Pump Rotor/Ball/Pin (S/A)	1
12	1769207	Cam Ring	1
13	1769208	Insert	1
14	1769209	Control Shaft, External Thrd.	1
15	1769211	Housing (S/A)	1

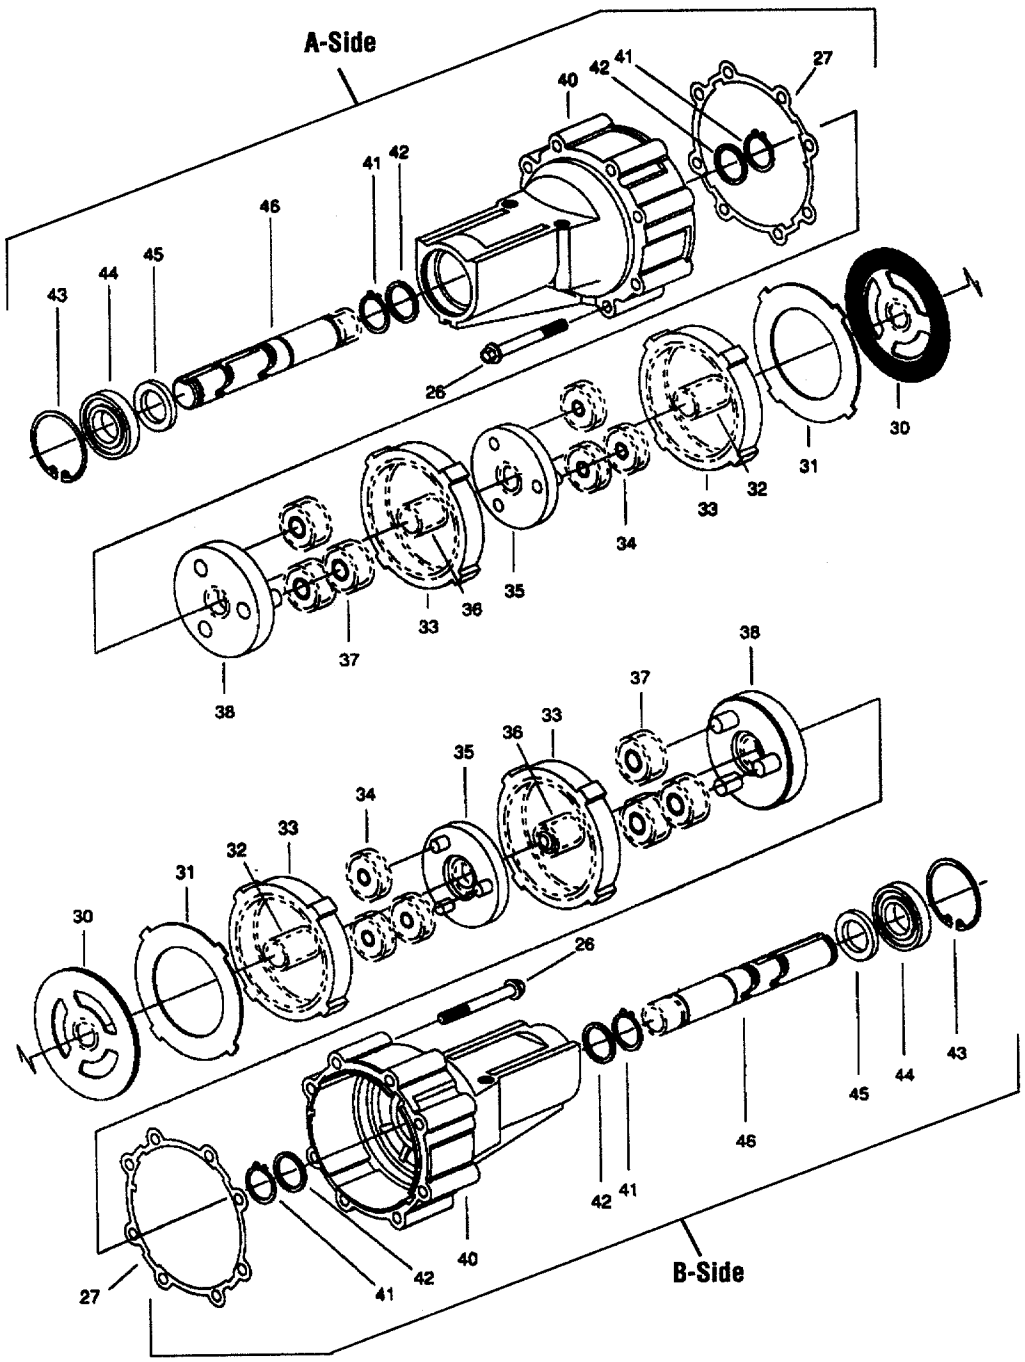

Ref #	Part #	Description	Qty.
16	1769212	Screw, 1/4-20 Hex Flange	A/R
16a	1769213	Screw, 1/4-20 Hex Flange	1
17	1769214	Filter Base "L"	1
18	1769125	Filter	1
19	1769127	Gasket	1
21	1769215	Nut, Dump Valve Fitting	1
22	1769216	Seal, O-ring	1
23	1769217	Spring, Dump Valve	1
24	1757376	Bracket, Dump Valve	1
25	1757377	Seal, O-ring	1

Ref #	Part #	Description	Qty.
26	1769218	Screw, 5/16 Hex Flange	16
27	1769219	Gasket, Axle Housing	2
28	1769220	15T Motor Rotor/Ball (S/A)	2
29	1769221	Pad, Friction (S/A)	2
30	1769222	Reaction, Plate	2
31	1769223	Plate, Backup	2
32	1769224	15T Sun Gear, First	2
33	1769225	Gear, Ring 57T	4
34	1769226	21T Planet Gear (S/A) First	6
35	1769227	15T Primary Carrier (S/A)	2

(Continued on following page)

EATON 851-111 HYRO TRANSMISSION BREAKDOWN (Continued)

Ref #	Part #	Description	Qty.
36	1769228	15T Sun Gear, Second (Steel)	2
37	1769229	21T Plnt. Gear (S/A) Second (Steel)	6
38	1769230	Secondary Carrier (S/A)	2
40	1769231	Axle Housing (S/A) A-Side & B-Side	1
41	1769232	Ring, Retaining, External	4
42	1769233	Thrust Washer	4
43	1769234	Ring, Retaining, Internal	2
44	1757700	Bearing, Ball	2
45	1769235	Seal, Radial Lip	2
46	1769236	Shaft, Axle—A-Side	1
48	1769237	Screw, Cap Socket	4
49	1769238	Plate, Pump (Class II)	1
50	1769239	Gerotor (Class II)	1
51	1769240	Spring	1
52	1769241	Ball	1
53	1769242	Piston, Dampening	
54		Brake Lever Parts	
A	1769243	Quad Seal	2
B	1769244	Rod, Push	2
C	1769245	E-Ring	4
D	1769246	Spring Base (S/A)	2
E	1769247	Spring Conical	2
F	1769248	Shaft, Brake	1
G	1769249	Screw, Cap, Hex	1
H	1769250	Lever, Brake, R.H.	1
I	1769251	Lever, Brake, L.H.	1
J	1769252	Shim	A/R
K	1769253	Nut, Hex, Lock	1
55	1769254	.625 Str. Fitting/O-ring	1

WIRING DIAGRAM

MODELS 13039 & 13040

S/N 130390100101 - 130390199999
130400100101 - 130400199999

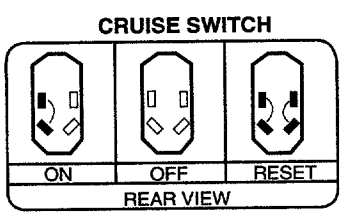

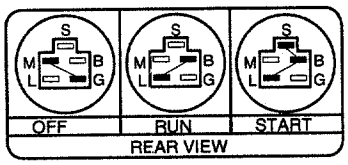

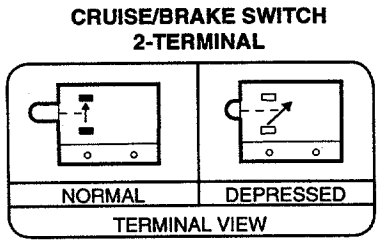

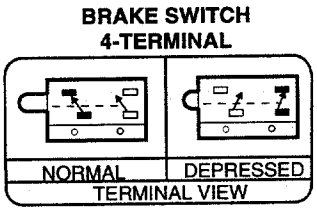

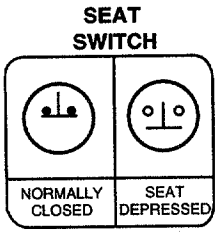

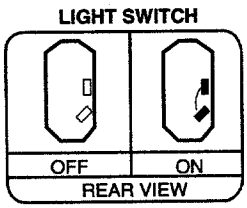

WIRE COLOR CODE	
BK	Black
BL	Blue
P	Purple
R	Red
W	White
Y	Yellow
R/W	Red/White
R/B	Red/Black
R/Y	Red/Yellow
Y/R	Yellow/Red
W/B	White/Black

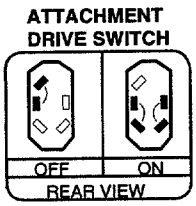

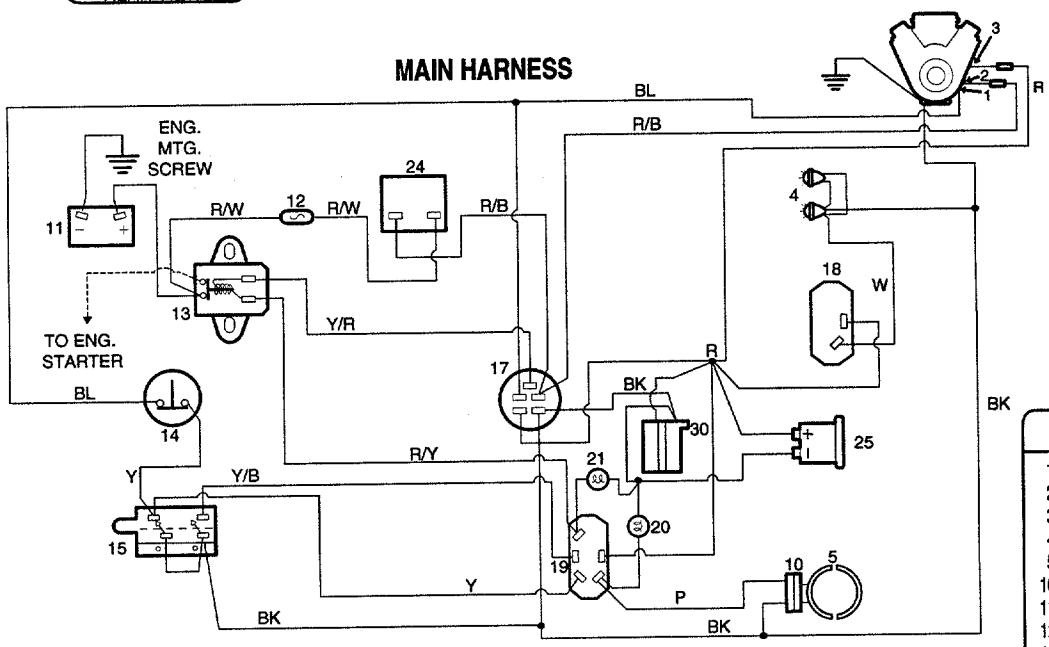

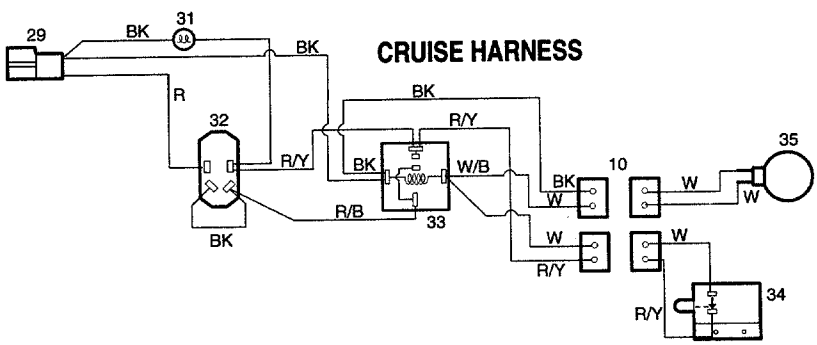

ITEM CODE	
1	Magneto
2	Alternator
3	Fuel Solenoid
4	Headlights
5	Attachment Clutch
10	Connector
11	Battery
12	Fuse
13	Start Solenoid
14	Seat Switch
15	Brake Switch
17	Key Switch
18	Light Switch
19	Attachment Switch
20	Attachment Light
21	Start Light
24	Ammeter
25	Hourmeter
29	Cruise Socket
30	Cruise Plug
31	Cruise Light
32	Cruise Switch
33	Cruise Relay
34	Cruise/Brake Switch
35	Cruise Magnet

PARTS ORDERING INFORMATION

If you need service or parts for your unit:

For service assistance or parts, contact your local authorized dealer.

The local dealer or service department will need to know the identification numbers of your unit to provide the most efficient service. See below for information on how to identify and record the identification numbers for your unit.

If you need engine service or parts:

For engine service or parts, contact your local authorized engine dealer. Look in the yellow pages of the phone book under "Engines–Gasoline" for the name of the nearest authorized engine dealer. An authorized engine dealer can handle all parts, repairs, and warranty service concerning the engine.

Note:

All Troy-Bilt® replacement parts must conform to our rigid quality specifications. Although some replacement parts we provide may vary slightly in shape, color or texture from the original parts, any variations will not affect the fit or performance of these parts on your unit.

When ordering parts for your unit, provide the following:

1. Serial number and model number of the unit.
2. Part number of part needed.
3. Part description.
4. Quantity needed.

CAUTION

We urge using only genuine Troy-Bilt® replacement parts, which meet all of the latest requirements. Replacement parts manufactured by others could present safety hazards, even though they may fit on this unit.

IMPORTANT:

Left and right sides of the unit are determined by standing behind the unit, in the operator's position, and facing the direction of forward travel.

NOTICE:

We reserve the right to change specifications, add improvements or discontinue the manufacture of any of our equipment without notice or obligation to purchasers of our equipment.

IDENTIFICATION NUMBERS

Record your unit's serial number and model number.

Refer to the unit's serial number/model number decal. When ordering any parts from us or the local servicing dealer, provide the information on this decal. For convenience and ready reference, record this information in the spaces provided below.

Unit's Model Number: _____

Unit's Serial Number: _____

Date of Delivery: _____

NOTE: Model number of unit is first 5 digits of Model/Serial number.

Record the engine identification numbers.

To obtain engine parts, provide your local authorized engine dealer with the engine identification numbers. Refer to the engine owner's manual for the location of these numbers. Record these numbers in the spaces below.

Engine Manufacturer: _____

Engine Horsepower Rating: _____

Engine Identification Numbers: _____

Troy-Bilt® Manufacturing Co.,
102nd St. & 9th Ave., Troy, New York 12180, For technical service call Toll-Free: 1-800-833-6990. For Parts call Toll-Free: 1-800-648-6776.
Garden Way Inc.
320 Van Sickle Road, Unit 12, St. Catherines, Ontario, L2R607–call Toll-Free: 1-800-225-3585

© 1994 Garden Way Inc.

Printed in the U.S.A.